



WDC10
InstaShow
Quick Start Guide



| | | | |
|----------------------|-------------------------------|--------------------------------|--------------------------------------|
| InstaShow Buttons | InstaShow Host | 2 Antennas | Cradle |
| Adapter & Plugs | Cable: USB A(M) to Micro B(M) | Cable: HDMI A(M) to A(M) | Cable: USB A(F) to USB A(M) |
| Screws & Rubber Foot | Velcro Strap | Round Double-sided Sponge Tape | Quick Start Guide & Safety Statement |



